

## General information



### INFLATING TIRES

- With the tire inflator compressor switch in the OFF position, plug the tire inflator 12V plug into the vehicle 12V DC/DC power source.
- Check your owners manual for the proper pressure (PSI) for your tires.
- Turn the tire inflator compressor switch to the ON position.
- Some vehicles require the car to be on to power the 12V DC/DC power source.
- Screw tire inflating adapter onto tire air valve.
- As your tire is filling, check the pressure gauge for the desired pressure in your tires.
- When your tire is filled, turn off the tire inflator and **then** remove the tire inflator 12V plug from the vehicle 12V DC/DC power source.

**NOTE:** Inflates a standard tire in approximately 8 minutes. The actual time may vary depending on actual tire size and operating conditions. **Do not over inflate.**

### INFLATING OTHER ITEMS

Select the suitable nozzle adapter and secure onto the inflating adapter.

Follow items instructions for proper inflating pressure.

Please allow the inflator to rest/cool after 10 minutes of continuous use.

Recommended cool down time is 20 minutes.

### CHANGING THE FUSE

Note: Always replace fuse of the same style.

1. Turn and remove the fuse cap and pull out fuse.
2. Insert new fuse inside the case and reinstall the fuse cap.

